



HONDA NERF BAR H011030


ATTACH "EACH" FOOT PEG
SUPPORT USING:
(1) M6 FLANGE HEAD BOLT
(1) M6 FLAT WASHER
(1) SQUARE WASHER
(1) M6 NYLOC NUT
TORQUE TO 4.3 FT. LBS.

REMOVE & REUSE
(2) OEM BOLTS TO
ATTACH "EACH"
FOOT PEG AND
TORQUE TO 12 Ft Lbs



ATTACH
WEB TO
TABS AS
SHOWN

ATTACH WEB
TO FRAME
USING (2)
CLIPS.

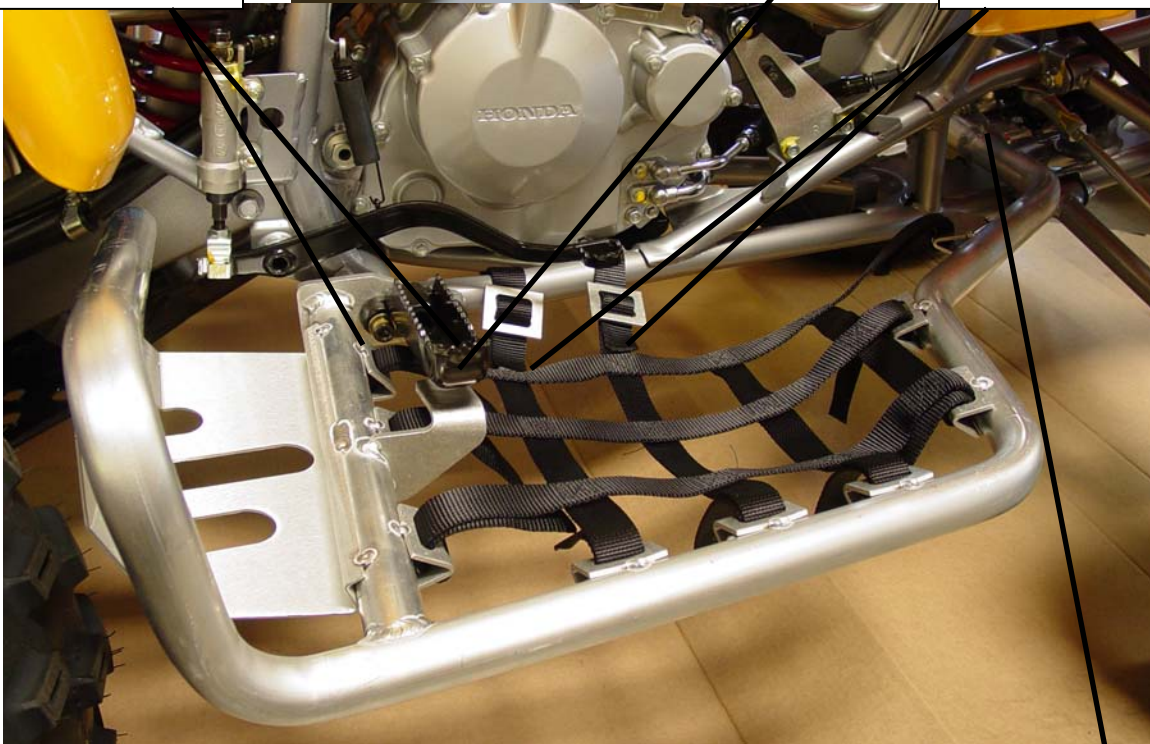

THREAD WEB THROUGH
CLIPS AS SHOWN

ATTACH FRONT NERF BAR TUBES USING:
(2) M10 X 70MM LG HEX HEAD FLANGE BOLTS
(2) M10 FLAT WASHER
(2) O.E.M. M10 NUTS
REMOVE BOLTS IN LOWER A-ARM REAR BUSHING.
INSERT LEFT BAR WELDED TUBE INTO THE RIGHT
NERF BAR AND ALIGN TABS TO BUSHING HOLES.
INSTALL LONG BOLTS THROUGH TABS AND TIGHTEN
USING (2) O.E.M. NUTS AND TORQUE TO 12 FT. LBS.

- 1. Maintenance:** Periodically, check all fasteners for tightness and re-torque to above specs.
- 2. Care and Cleaning:** Use only mild soap and water to clean.
- 3. Customer Service:** For further information contact Pro Armor (951) 270-0559

 **WARNING**

If nerf bar webbing is torn or damaged in any way, immediately stop riding the vehicle and replace the webbing. Do not operate the vehicle without securely installing the webbing to the vehicle frame.