



**PRO ARMOR**

## INSTALLATION INSTRUCTIONS HONDA TRX450R Nerf Bar

Read these instructions before installation to avoid injury to yourself or damage to the ATV.

### 1. Parts List:

Quantity	Part
1	Nerf Bar Left
1	Nerf Bar Right
2	Hex Head Bolt, M10 x 70mm
2	Flat Washer, M10
2	Hex Head Bolt, M6 x 16mm
2	Flat Washer, M6
4	Net Clips
1	Net Set
2	Footpeg Washer

### 2. Preparation:

- a) Set/Lock rear parking brake on bike, turn gas petcock to 'Off' position and stand bike upright so that it is sitting on the rear grab bar. Make sure vehicle is secure and will not fall over while installing your new Nerf Bars.



### 3. Installation:

- a) Install Hardware & Web Strap per photo's:

ATTACH FOOT PEG TO NERF SUPPORT USING M6 X 16MM HEAD BOLT AND WASHER.

REMOVE & REUSE OEM BOLTS TO ATTACH FOOT PEG.

NOTE: FIRST SLIDE LEFT NERF WELDED TUBE INTO RIGHT NERF TUBE THEN, LOOSELY ATTACH FRONT NERF BARS TO THE A-ARMS USING OEM NUTS AND SUPPLIED M10 X 70MM BOLTS AND WASHERS.

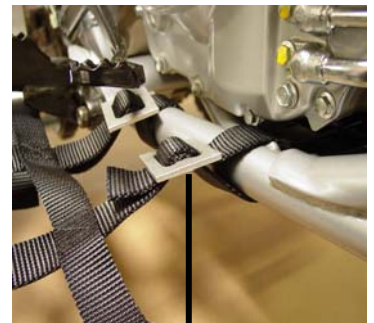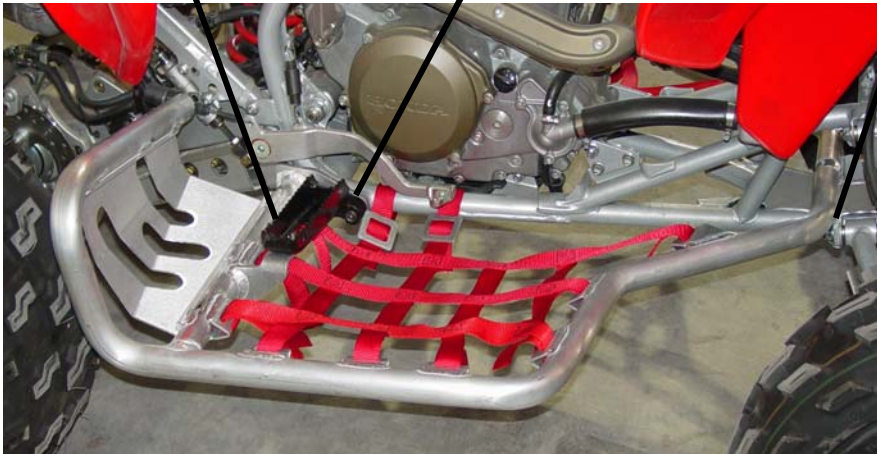

ATTACH NET CLIPS

**NOTE: Loosely install all hardware and tighten when complete.**

Torque M10 Bolts @ 30 ft. lbs.

Torque M6 Bolts @ 8 ft. lbs.



ATTACH NETTING TO TABS

**4. Maintenance:** Periodically check all fasteners for tightness and re-torque as required.

**5. Customer service:** For further information call Pro Armor at 951-270-0559.

 **WARNING**

If nerf bar webbing is torn or damaged in any way, immediately stop riding the vehicle and replace the webbing. Do not operate the vehicle without securely installing the webbing to the vehicle frame.

H042030