

INSTALLATION INSTRUCTIONS

Kawasaki Nerf Bar / Heel Guard (KFX700)

To avoid injury to yourself or damage to the ATV, read these instructions before installation.

1. Parts List:

Item	Part Name	Description	Qty
1	Nerf Bar Heel Guard Set	(1) Left & (1) Right (Aluminum)	1
2	M10 X 1.25 X 45mm Special Thread Bolt	Hex Head Flange Bolt (Steel Peg Weldment Mounts)	4
3	M8 X 1.25 X 20mm Bolt	Hex Head Flange Bolt (Front Nerf Bar Mount)	2
4	M6 X 1.0 X 20mm Bolt	Hex Head Flange Bolt (Rear Nerf Bar Hanger Mount)	2
5	M6 X 1.0 Nylock Nut	Nut (Rear Nerf Bar Hanger Mount)	2
6	Spacer	Steel Spacer (Steel Peg Weldment Spacer)	2
7	Web Set	(1 Left & 1 Right) (Nylon Strap)	1
8	Web Clips	Alum Clips (Attach Web to Frame Tube)	8
9	Steel Peg Weldments	Foot Peg Mount (Attach Rear Nerf Bar)	2
10	Flat Washer	M6	2
11	Flat Washer	M8	2
12	Flat Washer	M10	4

2. Preparation:

- a) Set/Lock rear parking brake on bike and turn gas petcock to 'Off' position. Make sure vehicle is secure while installing the Nerf Bar.
- b) Remove and discard Foot Peg Bolts

3. Install Webbing:

- a) Install Web Straps on Welded Tabs: see fig #1

Note: see drawing for correct orientation of the web strap assembly to the nerf bar tabs.

From the top, slip each web strap down and through the (2) nearest tab slots against the nerf tube.

From the bottom, pull the web strap up and out through the middle slot until snug and in-line with tabs.

4). Install Nerf Bar / Heel Guards:

Right Side: "Loosely" install following hardware. see fig #2

- a) Install (1) Item #10 Foot Peg Weldment to Frame using (2) Item #2 Bolts, (2) Item #12 Washers, and (1) Item #6 Spacer.
- b) Slide Rear of Nerf Tube over (1) Item #9 Steel Foot Peg Mount Tube and position Front Nerf Bar Tube into ATV frame.
- c) Attach Rear Nerf Tube Hanger Bracket to OEM Foot Peg using (1) Item #4 Bolt, (1) Item #10 Washer, and (1) Item #5 Nut

Left Side: "Loosely" install following hardware.

- a) Install (1) Item #10 Foot Peg Weldment to Frame using (2) Item #2 Bolts, (2) Item #12 Washers, and (1) Item #6 Spacer.
- b) Slide Rear of Nerf Tube over (1) Item #9 Steel Foot Peg Mount Tube and slide Front Nerf Bar Tube into Right Nerf Tube.
- c) Attach Rear Nerf Tube Hanger Bracket to OEM Foot Peg using (1) Item #4 Bolt, (1) Item #10 Washer, and (1) Item #5 Nut

Front Side: With the Front Left Nerf Bar Tube inserted into the Front Right Nerf Tube attach (2) Item #3 Bolts and (2) Item #11 Washers. (both sides)

5). Install Web Clips

Install Web Straps on Frame Tube using (8) supplied clips.

Thread web strap through both clip slots and then wrap web strap around the frame tube.

From underneath and in the opposite direction, pull web strap back through both clip slots until snug.

Torque bolts when complete: Item #2 M10 Bolt @ 30 ft.-lbs. Item #3 M8 Bolt @ 15 ft.-lbs Item #4 M6 Bolt @ 6 ft.-lbs.


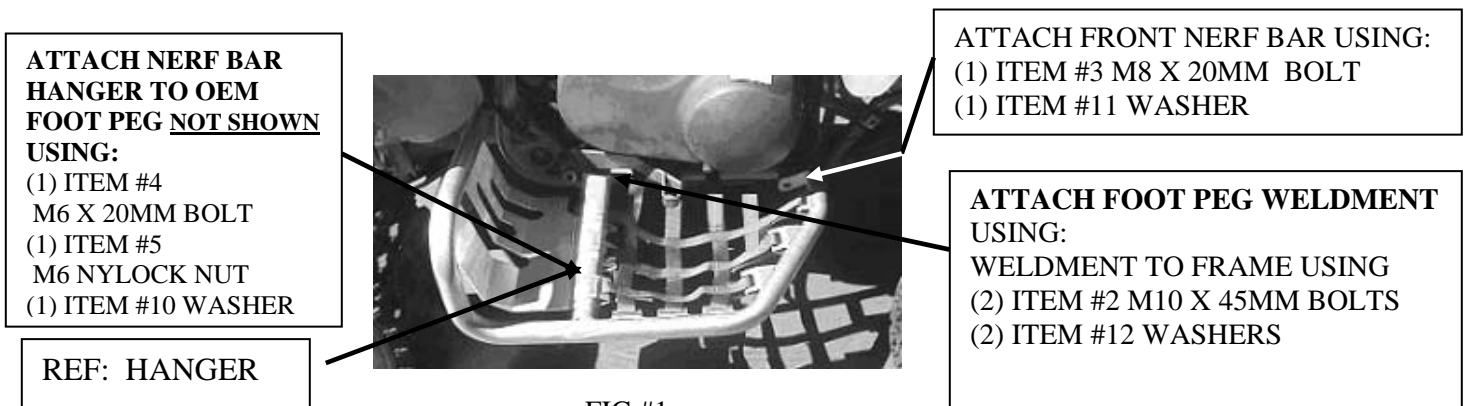


FIG #1

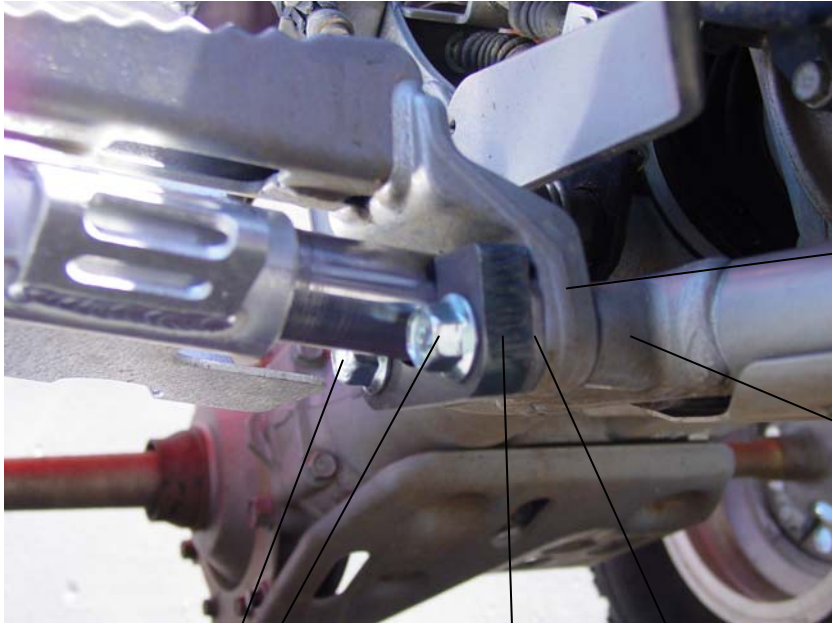

OEM FOOT PEG
NOTE: NOT SHOWN
IN FIG #1

Frame

FIG #2

Item #2 Bolts
Item #12 Washers

Item #9
Foot Peg
Mount

Item #6
Spacer

CLIP

TAB



Installation Note: For Kawasaki aftermarket pegs, "HANGER" must be match drilled and mounted to the outside of the front most plate of the peg, with the peg mounted in it's rearward position.

For OEM pegs, "HANGER" mounts to outside of peg front most plate.

6). Maintenance: Periodically check all fasteners for tightness and re-torque as required.

7). Care and Cleaning: Clean using a soft cloth and a non-abrasive metal polisher.

8). Customer Service: For further information contact your dealer

 **WARNING**

If nerf bar webbing is torn or damaged in any way, immediately stop riding the vehicle and replace the webbing. Do not operate the vehicle without securely installing the webbing to the vehicle frame.

K032050