



PRO ARMOR

INSTALLATION INSTRUCTIONS


Polaris Predator

Swing Arm


Read instructions before installation to avoid injury to yourself, bike or accessory.

1. Parts

Item	Part Name	Description	Qty
1	Swing Arm Guard		1
2	Bolt, Hex Flange Head	M8 X 1.25 X 50 mm Long (Chain Guard)	2
3	Flat Washer	M8 Washer (Chain Guard)	2
4	Nylock Nut	M8 X 1.25 Nut (Chain Guard)	2

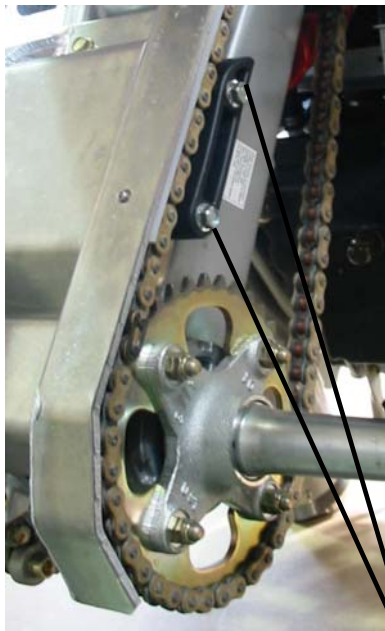

Install OEM Plastic Chain Guard using:
Item #2 (2) Bolts
Item #3 (2) Washer
Item #4 (2) Nuts

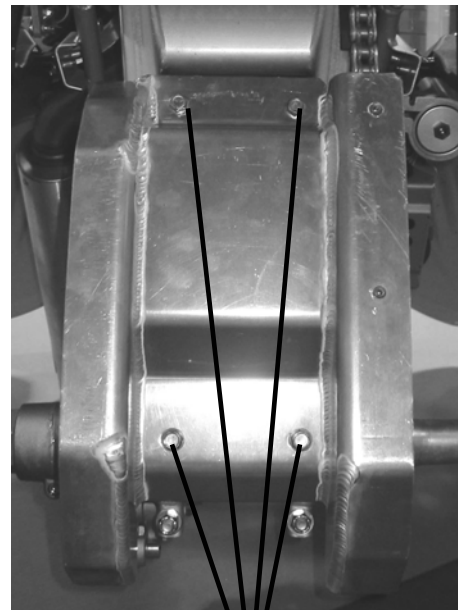

Install Swing Arm Guard using:
Item #1 (4) OEM

3. Torque: Torque all bolts at 22 ft. lbs.

4. Maintenance: Periodically, check all fasteners for tightness and re-torque as previously noted.

5. Customer service: For further information call Pro Armor at 951-270-0559

P042036